

## Horizon TD-WALLMOUNT-01-RZ assembly with the base


QSM-0669

Changelog: 08/06/2024 Original QSM

- 1) To access the I/O ports, please loosen the 2 screws that secure the cable manager and remove the cable manager.




- 2) Below is the photo of the system with the stand and the Wallmount bracket. You can use the wallmount bracket to mark the hole location on the wall (marked red). Please use appropriate hardware for the wall installation (e.g. anchors for the concrete or sheetrock wall). The holes marked in yellow (75 x 75 VESA pattern ) will be used to secure the bracket and the system together.

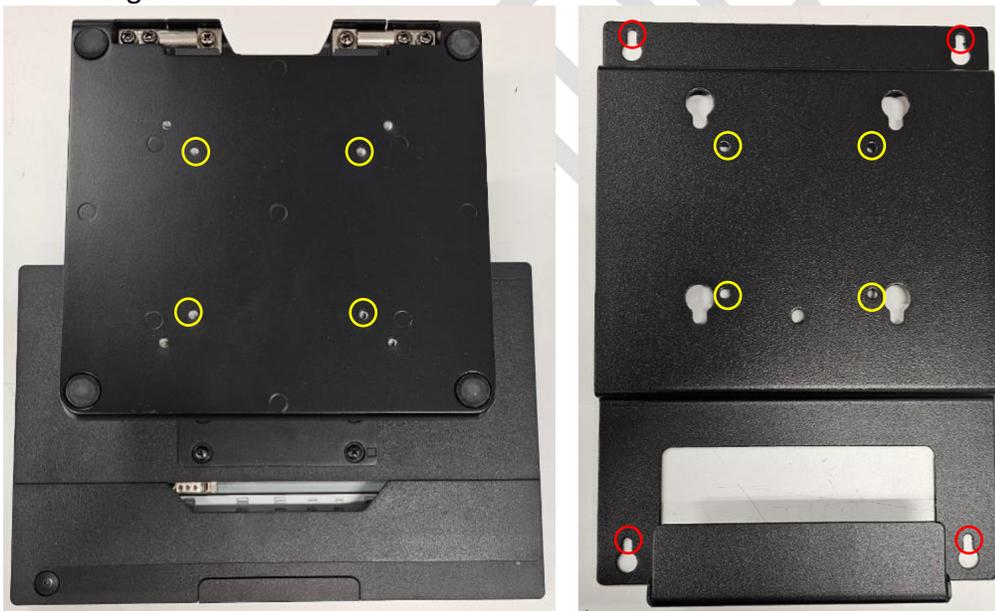

## Horizon TD-WALLMOUNT-01-RZ assembly with the base

QSM-0669

- Put the system down on the secure flat and clean surface, making sure there is nothing that can scratch the touch screen. Align the bracket holes with the holes on the base and secure the assembly using the 4 SCREW-M46 (M4 6mm screws). Connect the power adapter to the system and put the power adapter into the power adapter cradle. Connect any other interface cables required for your installation. You can then reinstall the cable manager back in place and secure it with the 2 screws.

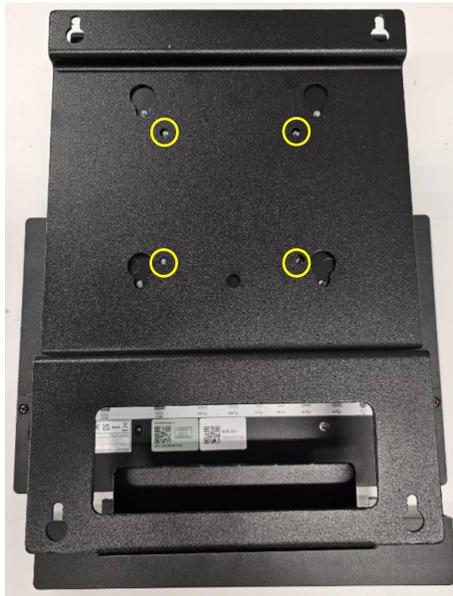

- Align the assembly to the wall and secure it using the appropriate for your wall installation hardware.